



**DS GENUINE**

## Changsha Proxima Technology Co. LTD

Add.: No.516-163, 5th Floor, Import and Export Exhibition and Trade Center,  
Huanghua Comprehensive Free Trade Zone, Huanghua Town,  
Linkong Block, Changsha Area, China (Hunan) Pilot Free Trade Zone

Email: [info@dsdiesel.com](mailto:info@dsdiesel.com)

Tel: +86-13997800913

Contact: Lydia

### Catalog OF DENSO INJECTOR

Item	Description	Part NO.	OE NO.
1	Fuel Injector Assembly	295050-2260W	8-98306475-0
2	Fuel Injector Assembly	295050-1520W	8-98243863-0
3	Fuel Injector Assembly	295050-1401	8-98238463-1
4	Fuel Injector Assembly	295050-1290W	8-98207435-0
5	Fuel Injector Assembly	095000-9800	8-98219181-0
6	Fuel Injector Assembly	095000-8970	8-98151856-3
7	Fuel Injector Assembly	095000-8933	8-98160061-3
8	Fuel Injector Assembly	095000-8903W	8-98151837-3
9	Fuel Injector Assembly	095000-5471W	8-97329703-2
10	Fuel Injector Assembly	095000-8170	8-98121163-2
11	Fuel Injector Assembly	095000-6390	8-97609791-5
12	Fuel Injector Assembly	095000-6376W	8-97609789-6
13	Fuel Injector Assembly	095000-6363W	8-97609788-0
14	Fuel Injector Assembly	095000-5500W	8-97367552-5
15	Fuel Injector Assembly	095000-5362	8-97602803-1
16	Fuel Injector Assembly	095000-5353	8-97601156-1
17	Fuel Injector Assembly	095000-5344	8-97602485-6
18	Fuel Injector Assembly	095000-5010	8-97306073-2
19	Fuel Injector Assembly	095000-5001	8-97306071-2
20	Fuel Injector Assembly	095000-0660W	8-98284393-0
21	Fuel Injector Assembly	295050-1440	23670-E0570
22	Fuel Injector Assembly	295050-1170	23670-E0031
23	Fuel Injector Assembly	295050-0790	23670-E0530
24	Fuel Injector Assembly	295050-0231	23670-E0400
25	Fuel Injector Assembly	095000-8092	23670-E0392
26	Fuel Injector Assembly	095000-6810	23670-E0201
27	Fuel Injector Assembly	095000-6753	23670-E0030
28	Fuel Injector Assembly	095000-6601	23670-E0040
29	Fuel Injector Assembly	095000-6593	23670-E0010
30	Fuel Injector Assembly	095000-6583	23670-E0320
31	Fuel Injector Assembly	095000-5963	23670-E0300
32	Fuel Injector Assembly	095000-5460	23670-E0260
33	Fuel Injector Assembly	095000-5281	23670-E0290
34	Fuel Injector Assembly	095000-5274	23670-E0251
35	Fuel Injector Assembly	095000-1211	6156-11-3300
36	Fuel Injector Assembly	095000-0800	6156-11-3100
37	Fuel Injector Assembly	295050-0890	1465A367
38	Fuel Injector Assembly	095000-9560	1465A257
39	Fuel Injector Assembly	095000-8110	1465A307
40	Fuel Injector Assembly	095000-7500	1465A279

Item	Description	Part NO.	OE NO.
41	Fuel Injector Assembly	095000-5760	1465A054
42	Fuel Injector Assembly	095000-5600	1465A041
43	Fuel Injector Assembly	295050-0200	23670-30400
44	Fuel Injector Assembly	295050-0100	23670-39196
45	Fuel Injector Assembly	295050-0470	23670-39355
46	Fuel Injector Assembly	295050-0540/295050-0810	23670-09380
47	Fuel Injector Assembly	295050-0470	23670-39355
48	Fuel Injector Assembly	295050-0100	23670-30190
49	Fuel Injector Assembly	295050-0070	23670-30380
50	Fuel Injector Assembly	095000-7720	23670-30320
51	Fuel Injector Assembly	095000-7800	23670-30310
52	Fuel Injector Assembly	095000-7761	23670-30300
53	Fuel Injector Assembly	095000-7780	23670-30280
54	Fuel Injector Assembly	095000-7040/095000-7030	23670-39145
55	Fuel Injector Assembly	095000-6760	23670-30140
56	Fuel Injector Assembly	095000-5740	23670-30080
57	Fuel Injector Assembly	095000-5881	23670-30050
58	Fuel Injector Assembly	095000-8740	23670-09360
59	Fuel Injector Assembly	295050-0210	23670-30410
60	Fuel Injector Assembly	095000-5921	23670-09070
61	Fuel Injector Assembly	295050-2510	8-97622035-1
62	Fuel Injector Assembly	295050-1560W	8-98259287-0
63	Fuel Injector Assembly	295050-1550W	8-98259290-0
64	Fuel Injector Assembly	295050-0451	8-97622035-0
65	Fuel Injector Assembly	295050-0152W	8-97622719-2
66	Fuel Injector Assembly	095000-8980	8-98167556-2
67	Fuel Injector Assembly	095000-8793W	8-98140249-3
68	Fuel Injector Assembly	095000-8633W	8-98139816-3
69	Fuel Injector Assembly	095000-6650W	8-98030550-4
70	Fuel Injector Assembly	095000-6300W	1-15300436-1
71	Fuel Injector Assembly	095000-6270	8-97610254-4
72	Fuel Injector Assembly	095000-5980W	8-97603099-1
73	Fuel Injector Assembly	095000-5516W	8-97603415-7
74	Fuel Injector Assembly	095000-8940	RE543266
75	Fuel Injector Assembly	295050-1380	
76	Fuel Injector Assembly	095000-6321	RE530361
77	Fuel Injector Assembly	095000-6311	RE530362
78	Fuel Injector Assembly	095000-6632	16650-2600E
79	Fuel Injector Assembly	095000-8910	VG1246080106
80	Fuel Injector Assembly	095000-8011	VG1246080051
81	Fuel Injector Assembly	095000-6701	R61540080017A
82	Fuel Injector Assembly	295050-0120	1465A323
83	Fuel Injector Assembly	295050-1760	1465A439
84	Fuel Injector Assembly	295050-0490	23670-E0220
85	Fuel Injector Assembly	295050-2570	23670-E0A30
86	Fuel Injector Assembly	95000-8890	23670-E0460
87	Fuel Injector Assembly	095000-5972	23670-E0360
88	Fuel Injector Assembly	095000-5226	23670-E0341
89	Fuel Injector Assembly	295050-0920	23670-E0540
90	Fuel Injector Assembly	095000-6952	23670-E0330
91	Fuel Injector Assembly	095000-6923	23670-E0230

<b>Item</b>	<b>Description</b>	<b>Part NO.</b>	<b>OE NO.</b>
92	Fuel Injector Assembly	095000-6613	23670-E0020
93	Fuel Injector Assembly	095000-6353	23670-E0050
94	Fuel Injector Assembly	095000-5990	23670-E0310
95	Fuel Injector Assembly	095000-5402	23670-E0281
96	Fuel Injector Assembly	095000-5392	23670-E0270
97	Fuel Injector Assembly	295050-0530	23670-0L100
98	Fuel Injector Assembly	295050-0520	23670-09350
99	Fuel Injector Assembly	295050-0810/0540/0540	23670-0L110
100	Fuel Injector Assembly	295050-0180	23670-0L090
101	Fuel Injector Assembly	295050-0460	23670-39365
102	Fuel Injector Assembly	295050-0740/295050-0620	23670-30420
103	Fuel Injector Assembly	095000-8650	23670-30370
104	Fuel Injector Assembly	095000-7380	23670-30240
105	Fuel Injector Assembly	095000-6771	23670-30150
106	Fuel Injector Assembly	095000-7390/095000-6190	23670-30100
107	Fuel Injector Assembly	095000-8740/8530	23670-0L070
108	Fuel Injector Assembly	095000-8290/8220	23670-0L050
109	Fuel Injector Assembly	095000-8290	23670-09330
110	Fuel Injector Assembly	095000-5930	23670-09060
111	Fuel Injector Assembly	095000-6290	6245-11-3100
112	Fuel Injector Assembly	095000-6280	6219-11-3100
113	Fuel Injector Assembly	095000-6140	6261-11-3200
114	Fuel Injector Assembly	095000-6120	6261-11-3100
115	Fuel Injector Assembly	295050-2160	8-98282514-0
116	Fuel Injector Assembly	295050-1900W	8-98260109-0
117	Fuel Injector Assembly	295050-1540W	8-98246751-0
118	Fuel Injector Assembly	295050-0480	8-98076995-2
119	Fuel Injector Assembly	295050-1710	8-98238318-0
120	Fuel Injector Assembly	295050-0910W	8-98159583-1
121	Fuel Injector Assembly	295050-2422	8-97435554-0
122	Fuel Injector Assembly	095000-8350	8-98119227-0
123	Fuel Injector Assembly	095000-8370	8-98119228-1
124	Fuel Injector Assembly	095000-8360W	8-98106694-1
125	Fuel Injector Assembly	095000-8340	8-98106693-2
126	Fuel Injector Assembly	095000-8030	8-98074909-2
127	Fuel Injector Assembly	095000-6100	8-98055862-0
128	Fuel Injector Assembly	095000-8340	8-97435030-1
129	Fuel Injector Assembly	095000-9960	8-97435029-0
130	Fuel Injector Assembly	095000-9940W	8-98246130-0
131	Fuel Injector Assembly	095000-9750	8-98201564-0
132	Fuel Injector Assembly	095000-6990W	8-98011605-3
133	Fuel Injector Assembly	095000-6980W	8-98011604-5
134	Fuel Injector Assembly	095000-6170	8-98055863-2
135	Fuel Injector Assembly	095000-6100	8-98055862-2
136	Fuel Injector Assembly	095000-5431	8-97311372-4
137	Fuel Injector Assembly	095000-9550	S00000218+01
138	Fuel Injector Assembly	095000-6791	D28-001-801+C
139	Fuel Injector Assembly	095000-5950	D28-001-801
140	Fuel Injector Assembly	095000-0881	S00026161+03
141	Fuel Injector Assembly	295050-0260	ME306476
142	Fuel Injector Assembly	095000-8920	ME306398

<b>Item</b>	<b>Description</b>	<b>Part NO.</b>	<b>OE NO.</b>
143	Fuel Injector Assembly	095000-8621	ME306200
144	Fuel Injector Assembly	095000-6860	ME304627
145	Fuel Injector Assembly	095000-5450	ME302143
146	Fuel Injector Assembly	095000-9720	ME307488
147	Fuel Injector Assembly	095000-8871	VG1038080007
148	Fuel Injector Assembly	095000-8100	VG1096080010
149	Fuel Injector Assembly	295050-1151	8-98197185-1
150	Fuel Injector Assembly	295050-0321	8-98110607-2
151	Fuel Injector Assembly	295050-0300	16600-5X00A
152	Fuel Injector Assembly	16600-5X30A	295050-1050
153	Fuel Injector Assembly	295050-0901	16600-LC10B
154	Fuel Injector Assembly	295050-1060	16600-3XN0A
155	Fuel Injector Assembly	295050-1650	23670-E0600
156	Fuel Injector Assembly	295050-1590	23670-E0590
157	Fuel Injector Assembly	095000-7172	23670-E0370
158	Fuel Injector Assembly	095000-5215	23670-E0351
159	Fuel Injector Assembly	295050-1430	RE556741
160	Fuel Injector Assembly	295050-0590	RE543351
161	Fuel Injector Assembly	095000-8550	RE539818
162	Fuel Injector Assembly	095000-7150	RE533505
163	Fuel Injector Assembly	095000-6880	RE532216
164	Fuel Injector Assembly	095000-6500	RE529117
165	Fuel Injector Assembly	095000-6490	RE529118
166	Fuel Injector Assembly	095000-6480	RE529149
167	Fuel Injector Assembly	095000-6470	RE529151
168	Fuel Injector Assembly	095000-6460	RE529150
169	Fuel Injector Assembly	095000-5480	RE520240
170	Fuel Injector Assembly	095000-5050	RE507860
171	Fuel Injector Assembly	295050-0760	23670-E0380
172	Fuel Injector Assembly	095000-9510	23670-E0510
173	Fuel Injector Assembly	095000-8480	23670-E0420
174	Fuel Injector Assembly	095000-8470	23670-E0410
175	Fuel Injector Assembly	095000-6550	23670-E0190
176	Fuel Injector Assembly	095000-6541	23670-E0180
177	Fuel Injector Assembly	095000-6520	23670-E0090
178	Fuel Injector Assembly	095000-6510	23670-E0080
179	Fuel Injector Assembly	095000-6402	23670-E0070
180	Fuel Injector Assembly	095000-5320	23670-E0140
181	Fuel Injector Assembly	095000-5300	23670-E0130
182	Fuel Injector Assembly	095000-9790	23670-51070
183	Fuel Injector Assembly	095000-9840	23670-59055
184	Fuel Injector Assembly	095000-9770	23670-59018
185	Fuel Injector Assembly	095000-9740	23670-51041
186	Fuel Injector Assembly	095000-9730	23670-51031
187	Fuel Injector Assembly	095000-7700	23670-51030
188	Fuel Injector Assembly	095000-7710	23670-59035
189	Fuel Injector Assembly	095000-6730	23670-51020
190	Fuel Injector Assembly	095000-7600	23670-0R160
191	Fuel Injector Assembly	095000-7300	23670-0R140
192	Fuel Injector Assembly	095000-6680	23670-0R050
193	Fuel Injector Assembly	095000-6410	23670-0R030

<b>Item</b>	<b>Description</b>	<b>Part NO.</b>	<b>OE NO.</b>
194	Fuel Injector Assembly	095000-6040	23670-0R020
195	Fuel Injector Assembly	095000-5610	23670-0R010
196	Fuel Injector Assembly	095000-7270	23670-0R120
197	Fuel Injector Assembly	095000-6230	23670-09140
198	Fuel Injector Assembly	095000-7670	23670-09280
199	Fuel Injector Assembly	095000-8050	23670-51040
200	Fuel Injector Assembly	095000-7630	23670-0R170
201	Fuel Injector Assembly	095000-6410	23670-0R030
202	Fuel Injector Assembly	095000-7680	23670-0R180
203	Fuel Injector Assembly	095000-7320	23670-0R130
204	Fuel Injector Assembly	095000-7690	23670-09270
205	Fuel Injector Assembly	095000-6970	23670-09190
206	Fuel Injector Assembly	095000-7660	23670-0R190
207	Fuel Injector Assembly	095000-7580/095000-5060	23670-0G010
208	Fuel Injector Assembly	095000-5420	23670-09030
209	Fuel Injector Assembly	095000-5250	23670-30070
210	Fuel Injector Assembly	095000-6253	16600-EB70D
211	Fuel Injector Assembly	095000-6240	16600-MB40E
212	Fuel Injector Assembly	095000-6252	16600-EB70A
213	Fuel Injector Assembly	095000-6244	16600-VM00D
214	Fuel Injector Assembly	095000-5655	16600-EB300
215	Fuel Injector Assembly	295050-0960	12640381
216	Fuel Injector Assembly		12644527
217	Fuel Injector Assembly	295050-2400	4336862
218	Fuel Injector Assembly	295050-0331	3707280
219	Fuel Injector Assembly	295050-0361	3707281
220	Fuel Injector Assembly	295050-0401	3707282
221	Fuel Injector Assembly	295050-0421	3707287
222	Fuel Injector Assembly	295050-0411	3707286
223	Fuel Injector Assembly	295050-1810	4183229