



Changsha Proxima Technology Co., Ltd.

Addr.: Room 401-119, 4th Floor, Supporting Service Center, Building 1, Phase 2, Huanghua Comprehensive Bonded Zone A, Huanghua Town, Lingkong Block, Changsha Area, China (Hunan) Pilot Free Trade Zone

Email: info@dsfuelsystem.com

Tel: +86-13997800913

Contact: Lydia

Catalog of VE Pump Parts

Item	Description	Type	Model	Part No.
1	Cross block (concave)	VE Pump Parts	1 460 140 337	337
2	Cross block (convex)	4 CYL	1 460 140 335	335
3	Cross Block (flat)	4 CYL	1 460 140 334	0334
4	Screw plug	VE Pump Parts	146421-0020	146421-0020
5	Control Valve	VE Pump Parts	C9Control Valve	C9Control Valve
6	Control Valve	VE Pump Parts	C7Control Valve	C7Control Valve
7	Control Valve	VE Pump Parts	4056Control Valve	4056Control Valve
8	Roller seat	VE Pump Parts	1 466 232 332	1 466 232 332
9	Roller kits	VE Pump Parts	146210-5720	146210-5720
10	Flying blocks	VE Pump Parts	Flying block(003)	Flying block(003)
11	Top bar	VE Pump Parts	2 433 124 446	2 433 124 446
12	Top bar	VE Pump Parts	2 433 124 439	2 433 124 439
13	Top bar	VE Pump Parts	2 433 124 388	2 433 124 388
14	Top bar	VE Pump Parts	2 433 124 379	2 433 124 379
15	Pressure regulator valve	VE Pump Parts	1 460 362 320	BV61(Cummins)
16	Pressure regulator valve	VE Pump Parts	146110-0620	BV42(ISUZU)
17	Pressure regulator valve	VE Pump Parts	1 463 370 326	BV31(3 CYL)
18	Speed control bracket accessories	VE Pump Parts	BV42 (high)	BV42 (high)
19	Speed control bracket accessories	VE Pump Parts	BV42 (low)	BV42 (low)
20	Speed control bracket accessories	VE Pump Parts	0 330 010 016	0 330 010 016
21	Speed Control Handle	VE Pump Parts	096450-0440	096450-0440
22	Speed Control Handle	VE Pump Parts	096450-0050	096450-0050
23	Speed Control Rod	VE Pump Parts	Speed Control Rod	Speed Control Rod
24	Solenoid Valve	VE Pump Parts	9900015	Short (12V) oil inlet
25	Solenoid Valve	VE Pump Parts	146650-8520	Long (12V) oil outlet
26	Solenoid Valve	VE Pump Parts	C7Solenoid Valve	C7Solenoid Valve
27	Solenoid Valve	VE Pump Parts	0 330 001 016	24V
28	Propshaft	VE Pump Parts	096121-0070	φ20X142
29	Propshaft	VE Pump Parts	096121-0090	φ20X142
30	Propshaft	VE Pump Parts	096121-0110	φ20X142
31	Propshaft	VE Pump Parts	1 466 100 405	φ20X142
32	Propshaft	VE Pump Parts	096120-0070	φ20X142
33	Propshaft	VE Pump Parts	1 466 100 395	φ20X128
34	Propshaft	VE Pump Parts	1 466 100 401	φ20X128
35	Propshaft	VE Pump Parts	1 466 100 325	20MM Cummins
36	Propshaft	VE Pump Parts	1 466 100 305	17MM
37	Propshaft	VE Pump Parts	146200-0000	17MM
38	Propshaft	VE Pump Parts	146200-0300	(ISUZU)
39	Oil transfer pump	VEPump Parts	1 467 030 307	Cover 17MM
40	Oil transfer pump	VEPump Parts	146100-0220	20MM (Cam)
41	Oil transfer pump	VEPump Parts	1 467 030 008	20MM Cover
42	Oil transfer pump	VEPump Parts	1 467 030 008	1 467 030 008
43	Oil transfer pump	VEPump Parts	1 467 030 303	20MM
44	Oil transfer pump	VEPump Parts	146100-0320	17MM(Cam ring)
45	Oil transfer pump	VEPump Parts	1 467 030 309	17MM
46	VE Pump assembly	assembly	ADS-VE4/11F1900L002	WF-VE4/11F1900L002

Item	Description	Type	Model	Part No.
47	VE Pump assembly	assembly	ADSVE4/11F1800L2495	NPVE4/11F1800LNP2495
48	VE Pump assembly	assembly	ADSVE4/11F1800L2371	NPVE4/11F1800LNP2371
49	VE Pump assembly	assembly	ADS-VE4/12F1900L001	NJ-VE4/12F1900LNJ01
50	VE Pump assembly	assembly	ADS-VE4/12E1650R005	NJ-VE4/12E1650R005
51	VE Pump assembly	assembly	ADS-VE4/11F1900L003	NJ-VE4/11F1900LNJ03
52	VE Pump assembly	assembly	ADS-VE4/11F1900L064	NJ-VE4/11F1900L064
53	VE Pump assembly	assembly	ADS-VE4/11F1900L005	NJ-VE4/11F1900L005
54	VE Pump assembly	assembly	ADS-VE4/11F1250R140	NJ-VE4/11F1250R140
55	VE Pump assembly	assembly	ADS-VE4/11F1250L009	NJ-VE4/11F1250L009
56	VE Pump assembly	assembly	ADS-VE4/11E1800R017	NJ-VE4/11E1800R017
57	VE Pump assembly	assembly	ADS-VE4/11E1800L047	NJ-VE4/11E1800L047
58	VE Pump assembly	assembly	ADS-VE4/11E1800L025	NJ-VE4/11E1800L025
59	VE Pump assembly	assembly	ADS-VE4/11E1800L024	NJ-VE4/11E1800L024
60	VE Pump assembly	assembly	ADS-VE4/11E1800L019	NJ-VE4/11E1800L019
61	VE Pump assembly	assembly	ADS-VE4/11E1800L013	NJ-VE4/11E1800L013
62	VE Pump assembly	assembly	ADS-VE4/11E1800L008	NJ-VE4/11E1800L008
63	VE Pump assembly	assembly	ADS-VE4/11E1600R015	NJ-VE4/11E1600R015
64	VE Pump assembly	assembly	ADS-VE4/11E1500R001	NJ-VE4/11E1500R001
65	Nozzle Transition Plate	VEPump Parts	P141	P141
66	Nozzle Transition Plate	VEPump Parts	7169-487	7169-487
67	Nozzle Transition Plate	VEPump Parts	7169-408	7169-408
68	Nozzle Transition Plate	VEPump Parts	51	51
69	Nozzle Transition Plate	VEPump Parts	2 430 136 221	2 430 136 221
70	Nozzle Transition Plate	VEPump Parts	2 430 136 216	2 430 136 216
71	Nozzle Transition Plate	VEPump Parts	2 430 136 212	2 430 136 212
72	Nozzle Transition Plate	VEPump Parts	2 430 136 206	2 430 136 206
73	Nozzle Transition Plate	VEPump Parts	2 430 136 202	2 430 136 202
74	Nozzle Transition Plate	VEPump Parts	2 430 136 191	2 430 136 191
75	Nozzle Transition Plate	VEPump Parts	2 430 136 166	2 430 136 166
76	Nozzle Transition Plate	VEPump Parts	2 430 136 085	2 430 136 085
77	Nozzle Transition Plate	VEPump Parts	2 430 134 023	2 430 134 023